


TALKING QUARTZ ANALOG ALARM WATCH INSTRUCTION SHEET

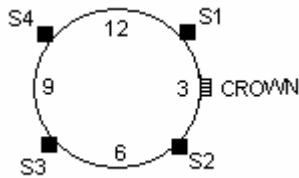

(I.) BASIC FUNCTION FOR EVERY PUSH BUTTON AND CROWN

1. Crown-adjust hour and minute hands.
2. S1 Button – Talking voice function. Press down to activate voice chip.
3. S2 Button – A) “Chime Off and Chime Function:
 - When “chime” is on-it activates voice tell time every hour.
 - B) Another function: after pushing S3 Button to the “set time” or “set alarm time” mode, each push of the S2 button advances voice time by one minute.
4. S3 Button – Set mode.
 - A) Time
 - B) Set Time
 - C) Set Alarm Time
5. S4 Button – A) Set “Alarm Off”
B) Set alarm on
 - By following choice of sound -
 - “Rooster crow” sound alarm
 - “bi bi” sound alarm
 - “dong dong” sound alarmC) Aother function
 - After pushing S3 Button to the “set time” or “set alarm time” mode, each push of the S4 Button advances voice time one hour.

(II.) INSTRUCTION

1. SET HOUR AND MINUTE HANDS IN TIME:
 - Pull out the crown and set hour and minute hands as existing time. Then push back the crown to normal position.
2. SET TALKING VOICE TIME PROCEDURES
 - Press S3 set mode button to “set time” mode.
 - Press S4 to set hour time.
 - Then press S2 to set minute time.
(always allow 15 sec. time to set the minute time to match minute hands before sweep hand touches 12. otherwise that would create minute difference between minute hands and voice time.)
 - Press S3 back to “time” mode for normal use and all done.
 - Press S1 talking voice will have same time as hour & minutes hands shown.

3. SET ALARM VOICE TIME PROCEDURES
 - Press S3 set mode button to “set alarm time” mode.
 - Press S4 to set hour.
 - Then press S2 to set minute time and all done.
 - Press S3 back to “time” mode for normal use.
 - Press S4 to select any of the 3 alarm sounds as alarm on function:

4. TO CHECK EXISTING ALARM AND CHANGE ALARM TIME:
 - A) Press S3 set mode button to “set alarm time” mode then press S1 Button to hear previous/existing alarm time.
 - B) To change alarm time, follow #3 instructions.

5. SET CHIME ON/OFF PROCEDURES:
 - Press S2 alternately to activate on and off voice function to speak the time every hour on the hour.